



## LATCH-MATIC PROGRAM INSTRUCTIONS

**To program additional key fobs to your Latch-Matic module follow these instructions:**

1. Press the small program button on the side of the module three (3) times; it is now ready to learn the new transmitter.
2. Press the first button on each key fob. The new key fobs will now activate your Classic II remote Latch-Matic locking system.

**NOTE:** The maximum amount of key fobs one module can hold is four (4).

*Reading, Aluma-Fill, Aluma Chock, Grip-'n-Glide, and Latchmatic* are registered trademarks and *Classic II*, is a trademark of Reading Truck Body, LLC in the United States and in some foreign countries.  
©2008 Reading Truck Body, LLC All dimensions subject to plus or minus tolerance of 1/4" and all dimensions and specifications are subject to change without notice.